

# ATM-9203 Periodic Verification Unit



## Instruction Manual

ATM-9203 Periodic Verification Unit is used to verify that the ACM2 Constant Ground Monitors are in proper working order

### TEST PROCEDURE:

1. Unplug the power supply to the ACM2 unit.
2. Plug the Periodic Verification Unit (PVU) **GROUND** lead (Male Banana Plug) to the common ground at the workstation.
3. Connect the PVU **BENCH** lead (Male Phono Plug) to the ACM2 **BENCH** plug-in.
4. Connect the power supply to the CM420 power plug-in.
5. The ACM2 bench led should be green.
6. Plug the PVU **OPERATOR LEFT** lead (Banana Male Plug) to the ACM2 **LEFT OPERATOR** remote jack.
7. Plug the PVU **OPERATOR RIGHT** lead (Banana Male Plug) to the CM420 **RIGHT OPERATOR** remote jack.
8. Press the **OPERATOR LEFT** push button on the PVU and the **LEFT OPERATOR** led on the CM420 should change from a blinking red to green.
9. Release the PVU's **OPERATOR LEFT** push button and the **LEFT OPERATOR** led on the ACM2 should change to a blinking red, with momentary beeps up to a maximum of 7 to 12 beeps.
10. Press the **BENCH** push button on the PVU and the **BENCH** led on the ACM2 should change to red, with constant beeps.
11. Release the PVU's **BENCH** push button and the **BENCH** led on the ACM2 should change to green, with no beeps.
12. Press the **OPERATOR RIGHT** push button on the PVU and the **RIGHT OPERATOR** led on the ACM2 should change from a blinking red to green.
13. Release the PVU's **OPERATOR RIGHT** push button and the **RIGHT OPERATOR** led on the ACM2 should change to a blinking red, with momentary beeps up to a maximum of 7 to 12 beeps.
14. If the monitor did not pass as per the test procedure please contact Bokar International Technical Support.



BOKAR International  
10 Enterprise Drive  
Carbondale, PA 18407, USA

Tel: (570) 842-2812 Fax: (570) 842-4290 E-mail: [bokar@bomir.com](mailto:bokar@bomir.com)

[www.bokar.com](http://www.bokar.com) [www.SMT-tool.com](http://www.SMT-tool.com) [www.ESDmeters.com](http://www.ESDmeters.com) [www.ESDpackaging.com](http://www.ESDpackaging.com)  
[www.assembly-smt.com](http://www.assembly-smt.com) [www.SMTpreheater.com](http://www.SMTpreheater.com) [www.SMTrepair.com](http://www.SMTrepair.com) [www.no-stat.com](http://www.no-stat.com)

US Master Distributor: [www.bomir.com](http://www.bomir.com)